

Installation instructions of the safety "T" on Ecorad radiators Part # T65

All EcoRad radiators with feet must be secured to the building structure using the security "T" provided by EcoRad. (Fig.1)

1. Locate an anchoring point for installation against the wall (ex; stud.) nearest to the center of the radiator.
2. Place your radiator against the wall where you want to install it.
3. According to your radiator model you can have the 3/4" extension for the safety "T" if needed.
4. Remove the protective sheath from the tip of the screw on the "T".
5. Remove and set aside the washer that is at the end of the screw.
6. Drag the "T" vertically between 2 sections of the radiator, where the anchor point was identified (Fig. 2) and replace the washer on the wall side of the radiator.
7. Support the "T" using a Robertson screwdriver (square) and drag the "T" so as to leave a distance of about 1/2 inch (2 cm) between the "T" and the lower side of the head of the radiator (fig. 3-4).
8. Turn the "T" level before reaching the inside section of the radiator closest to the wall and then tighten the screw.



Fig. 1



Fig. 2

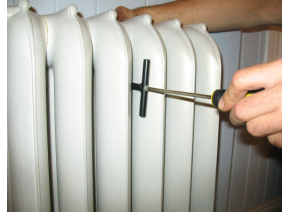 


Fig. 3

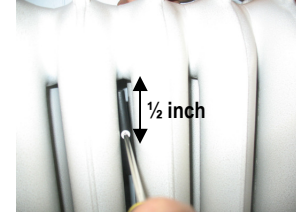 


Fig. 4

NOTE: Improper installation of the security "T" can cause bodily injury or property damage.

Print in Canada

Installation instructions of the safety "T" on Ecorad radiators Part # T65

All EcoRad radiators with feet must be secured to the building structure using the security "T" provided by EcoRad. (Fig.1)

1. Locate an anchoring point for installation against the wall (ex; stud.) nearest to the center of the radiator.
2. Place your radiator against the wall where you want to install it.
3. According to your radiator model you can have the 3/4" extension for the safety "T" if needed.
4. Remove the protective sheath from the tip of the screw on the "T".
5. Remove and set aside the washer that is at the end of the screw.
6. Drag the "T" vertically between 2 sections of the radiator, where the anchor point was identified (Fig. 2) and replace the washer on the wall side of the radiator.
7. Support the "T" using a Robertson screwdriver (square) and drag the "T" so as to leave a distance of about 1/2 inch (2 cm) between the "T" and the lower side of the head of the radiator (fig. 3-4).
8. Turn the "T" level before reaching the inside section of the radiator closest to the wall and then tighten the screw.



Fig. 1



Fig. 2

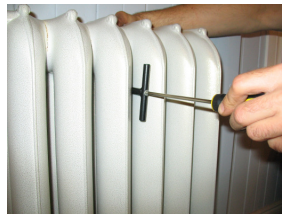 


Fig. 3

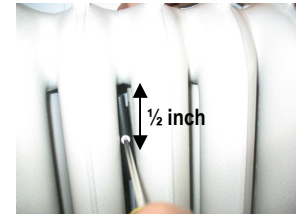 


Fig. 4

NOTE: Improper installation of the security "T" can cause bodily injury or property damage.

Print in Canada